


# EZCT Software Version 3.15

## Installation Guide

### Graphs Summary

Kneepoint Type - ASA 10/50 Marker

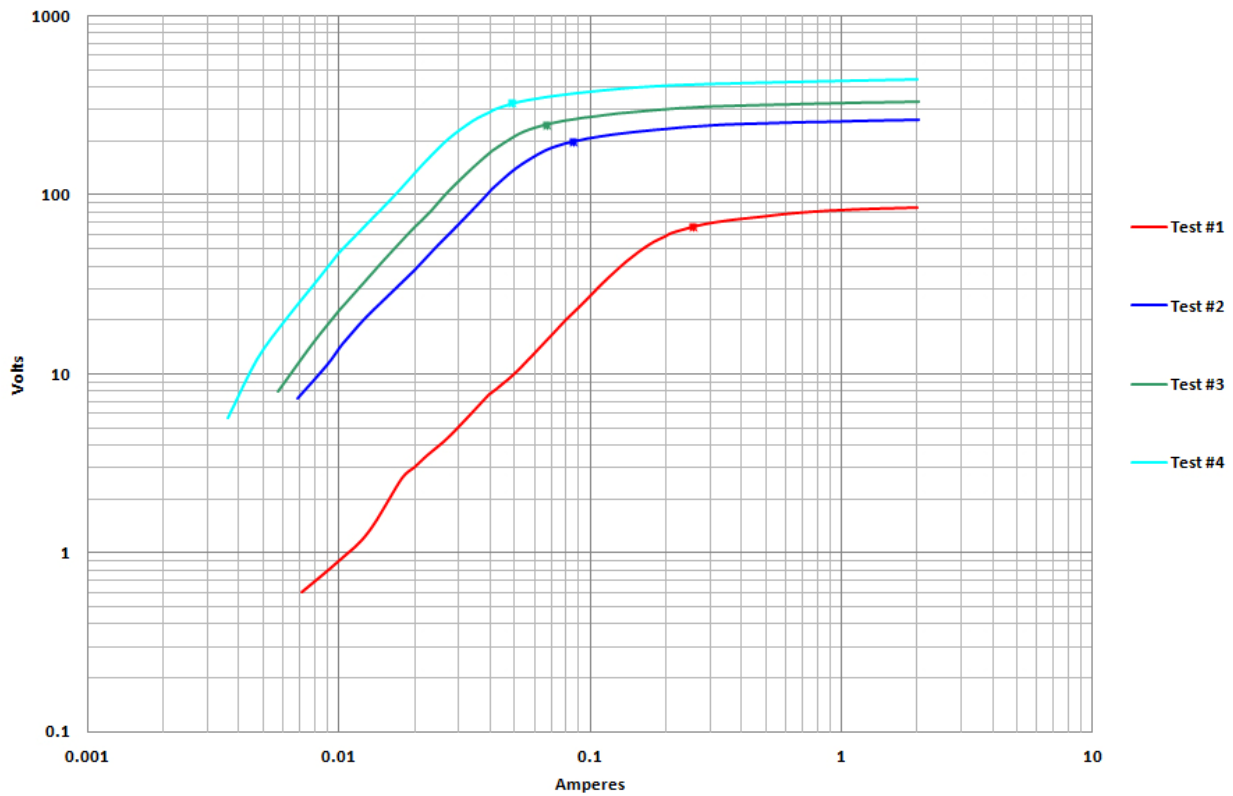

**Vanguard Instruments Company, Inc.**

1520 S. Hellman Ave.

Ontario, California 91761, USA

TEL: (909) 923-9390  
FAX: (909) 923-9391

October 2014

Follow the steps below to install the EZCT Software Version 3.15:


1. Make sure you have a 32-bit version of Microsoft Excel installed. To check the version:

**Excel 2010:** Click on "File" > "Help", and under "About Microsoft Excel", look for "Version: xxx (32-bit)"


**Excel 2013:** Click on "File" > "Account" > About Excel, and under "About Microsoft Excel", look for "Microsoft Excel xxx (32-bit)".

If you have the 64-bit version of Excel installed, un-install it from the Windows Control panel and re-install the 32-bit version.

2. Open Windows Explorer and navigate to the folder containing the software installation file (EZCT3.15\_PGE-20141012.exe).
3. Right click on the filename and select "Run as administrator". You must have administrator privileges to perform this task. If you do not, please contact a member of your technical support staff that can perform this step.

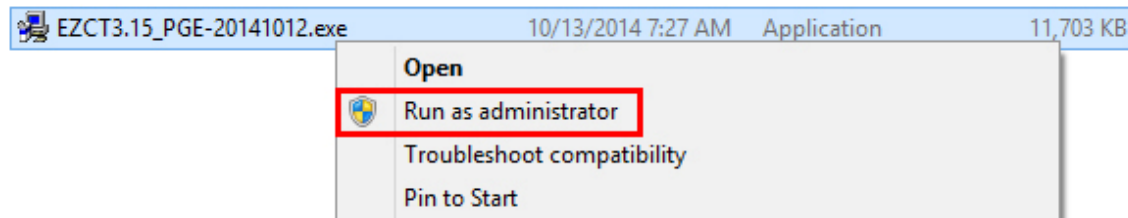


4. The following screen will be displayed:

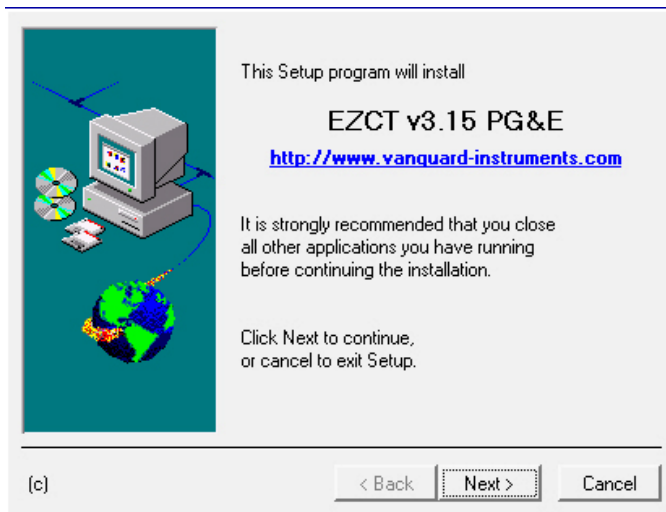


Click on the "Next" button.

5. The following screen will be displayed:

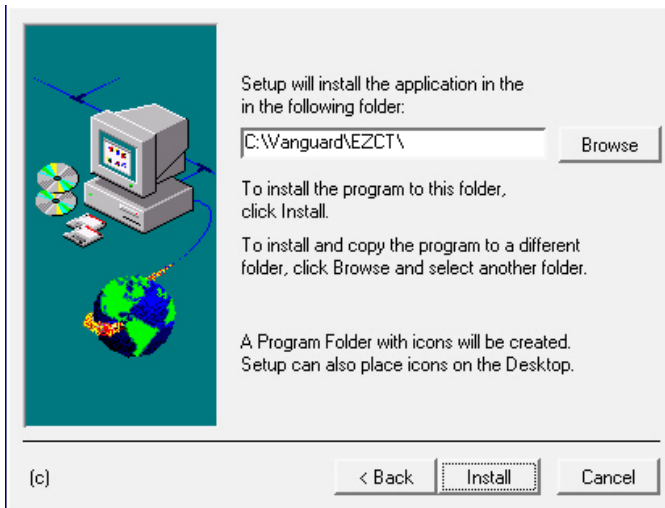


By default the application will be installed in the folder "C:\Vanguard\EZCT\". We highly recommend using this default installation location. If you prefer to change it, click on the "Browse" button and select a different folder. Click on the "Install" button.

6. The application will be installed in the selected installation location and the following screen will be displayed:

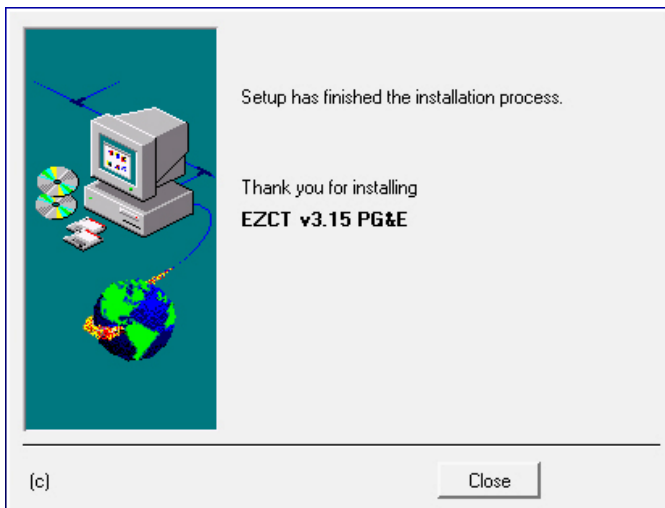


Click on the "Close" button.

7. Open Windows Explorer and navigate to the folder where the application was installed (we are assuming "C:\Vanguard\EZCT\" for this example. Locate the file "registerDLLs.bat". Right click on this file and select "Run as administrator".

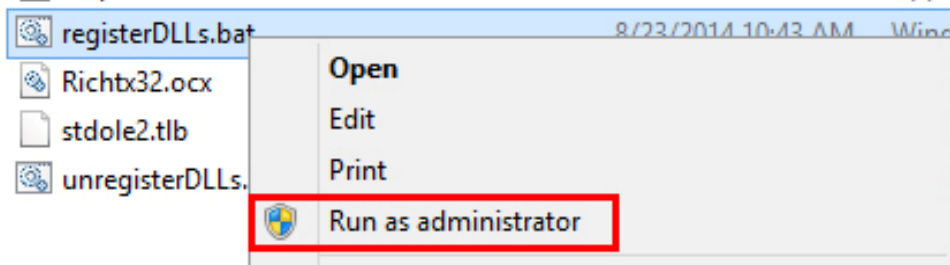

8. A window will temporarily open and perform some updating tasks. Once complete, it will close automatically.
9. From the same installation folder ("C:\Vanguard\EZCT\") double click on "Ezct315\_PGE.exe" to launch the application.

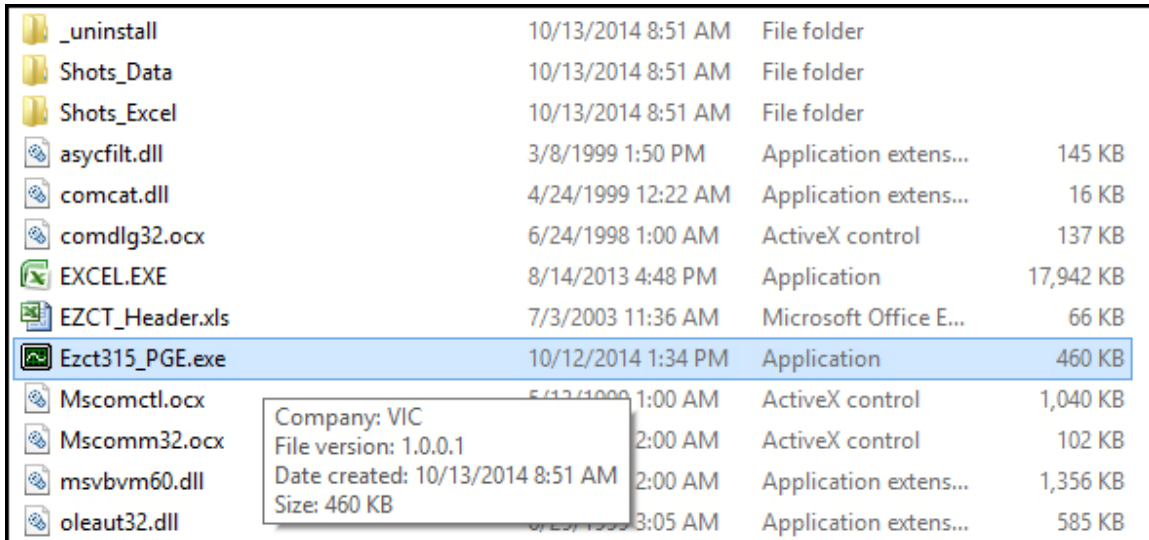

The EZCT 3.15 application will be launched. You do not need to perform steps 1-8 again. To launch the application again, simply double click on "Ezct315\_PGE.exe" from the installation folder ("C:\Vanguard\EZCT\").



**Vanguard Instruments  
Company, Inc.**

1520 S. Hellman Ave • Ontario, CA 91761 • USA

Phone: 909-923-9390 • Fax: 909-923-9391

[www.vanguard-instruments.com](http://www.vanguard-instruments.com)

Copyright © 2014 by Vanguard Instruments Company, Inc.

EZCT Software Version 3.15 Installation Guide • Revision 1 • October 13, 2014 • TA