

AC DIELECTRIC TEST SET MANUAL 600P SERIES

Model Number 6CP100/50-10

VERSION 3.5

Phenix Technologies, Inc. A Division of Doble Engineering 75 Speicher Drive Accident, Maryland 21520

Copyright © Phenix Technologies, Inc.

REV:4/28/23

6CP100/50-10

TABLE OF CONTENTS

DESCRIPTION

SECTION NUMBER

DANGER / GENERAL SAFETY PRECAUTIONS	
TECHNICAL SPECIFICATIONS	1
UNCRATING PROCEDURE	2
CONTROLS AND INDICATORS	3
INITIAL SET-UP—MECHANICAL / ELECTRICAL	4
OPERATIONAL VERIFICATION / GENERAL TEST	5
CALIBRATION	6
TROUBLESHOOTING	7
MECHANICAL MAINTENANCE	8
CHECKING OIL PURITY / SPECIFICATIONS	9
TRANSPORTING/STORAGE OF EQUIPMENT	10
CIRCUIT DIAGRAM SYMBOLS	11
ELECTRICAL DIAGRAMS	12
PARTS ORDERING INFORMATION	13
RECOMMENDED SPARE PARTS	14
PARTS LIST	15
RETURNED MATERIAL	16
CUSTOMER COMMENTS / SUGGESTIONS	17
ATTACHMENTS TAD1U Timer Manual	

DANGER / WARNINGS



DANGER

Grounding of this unit is necessary for the safe operation of this equipment. Disconnect inputs before ungrounding this equipment.

GENERAL SAFETY PRECAUTIONS



This equipment can produce POTENTIALLY LETHAL VOLTAGES! Improper operation or test practices may result in injury or death to the operator or surrounding personnel.

The operation of High Voltage test equipment should only be performed by personnel familiar with HIGH VOLTAGE testing and safety procedures. The operator of this equipment must be aware of all hazards associated with High Voltage testing. The operator is responsible for himself and others in close proximity of the testing area.

Some General Safety Practices for working with High Voltage Test Equipment have been listed below for your reference.

- Become familiar with your instrument before performing an actual test
- Know your work area, check that all circuits are de-energized and locked out.
- Never work alone; always work with another qualified worker.
- Mark off entire work area with barriers and warning tape.
- Make all personnel aware of your testing activities.
- Be aware of dangerous conditions that may arise from energizing a test specimen.
- Never modify test equipment, modifications to equipment could introduce an unknown hazard or hinder a designed-in safety feature.
- DO NOT operate damaged equipment. Remove power, and do not use the equipment until safe operation can be verified by service-trained personnel.

Phenix Technologies, Inc. assumes no liability for unsafe or improper use of test equipment.

SECTION 1: TECHNICAL SPECIFICATIONS

Input

220 - 240 volts, single phase, 50/60 Hz, 30 amperes

Output Rating

0 - 50 kilovolts, 200 milliamperes

0 - 100 kilovolts, 100 milliamperes

Duty Cycle – Capacitive Loading

5 minutes ON /15 minutes OFF @ 10 kVA 15 minutes ON / 1 hour OFF @ 7.5 kVA 1 hour ON / 1 hour OFF @ 5 kVA

Type of Cooling

ONAN (Oil Natural / Air Natural Convection)

Operating Ambient Temperature

10-40 degrees C

Output Termination

2" Polished Ball – 50 kV 3" x 12" High Voltage Spinning – 100 kV

Metering

Output Voltmeter:	Display: Accuracy: Ranges: Type:	3 ½ digit LCD ± (0.8% of Reading + 0.2% of Range) + LSD (10-100% of Range) 0 to 50kV / 100 kV Peak/(Square root of 2)
Output Currentmeter:	Display: Accuracy: Ranges: Type:	3 ½ digit LCD ± (0.8% of Reading + 0.2% of Range) + LSD (10-100% of Range) 0 to 200μA / 2mA / 20mA / 200mA True RMS

Sizes and Weights

Control/Regulator Section:	21.25" (540mm) W x 16.75" (426mm) D x 13.75" (350mm) H; 63 lbs. (29 kg)
High Voltage Section:	19" (483mm) W x 19" (483mm) D x 29" (734mm) H; 280 lbs. (127 kg)

Additional Equipment


Cart:	22.5" (572mm) W x 29.25" (743mm) D x 50" (1270mm) H; 70 lbs. (32 kg)
Cables:	30 lbs. (14 kg)

- 1. Exercise care in removing shipping materials so as not to damage unit.
- 2. Perform visual inspection to determine if unit was damaged during shipment. If there are any signs of physical damage (such as dents, scratches, oil leaks), contact the Service Department at Phenix Technologies before proceeding.

SECTION 3: CONTROLS AND INDICATORS

Control Panel

Figure 3-1

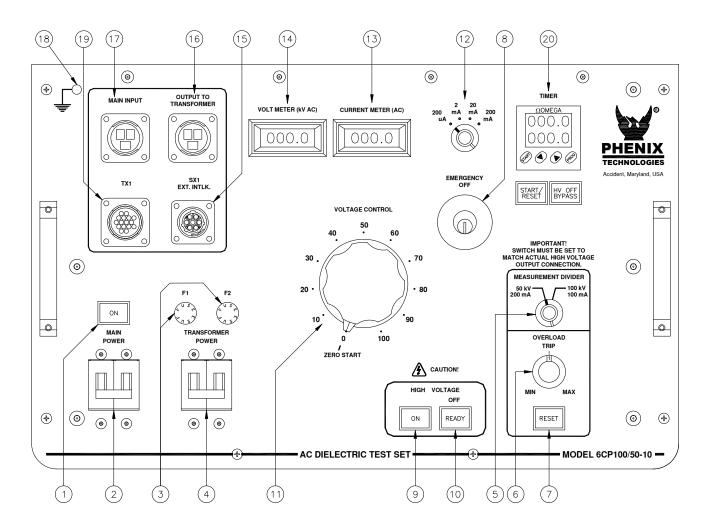

The following descriptions are keyed to Figure 3-1:

1. Main Power Indicator.

Illuminates to indicate input power is supplied to unit.

- 2. Main Power Circuit Breaker Turns main power of unit on and off and provides input overload protection.
- 3. **F1, F2** Control Power Fuse.
- 4. **Transformer Power Circuit Breaker.** Turns main power to HV tank on and off.
- Measurement Divider Switch Selects proper overload and voltmeter circuitry for the H.V. output terminal being used. Match switch setting to output being used on HV transformer.

CONTROLS AND INDICATORS

Control Panel (Cont'd)

6. Overload Trip

Use for presetting desired Overcurrent trip setting. Range approximately 10-110% of rated current.3-2

7. Reset

Will light when Overcurrent trip setting is exceeded. Push to reset. Lamp must be extinguished for H.V. ON.

8. Emergency Off

Push down to stop test immediately. Button must be pulled up to activate High Voltage Output.

9. High Voltage On Switch and Indicator Lamp

Turns on H.V. when Ready indicator is illuminated.

10. High Voltage Off Switch and Indicator Lamp

Turns H.V. off, indicator shows when all conditions are met to turn H.V. ON. (External Interlock closed, Reset Lamp off, Emergency Off Button pulled up, Voltage Control at Zero).

11. Voltage Control

Adjusts Output Voltage and must be set at zero to turn High Voltage on.

12. Currentmeter Range Selector

Turn to select the desired current measurement range.

13. Output Currentmeter

14. Output Voltmeter

15. Ext. Intlk. – SX1/WX1. Provides for user connection of external interlock or auxiliary safety control device such as emergency off switch, gate switch, foot switch, dead man switch, etc. Included plug has shorting jumper installed to complete circuit. Jumper must be removed, and cable connected to user supplied device by user if desired to use this provision. Only non-energized switch or dry relay contact devices may be used. This is a series 120VAC circuit that must remain closed for high voltage to be activated. An optional warning light accessory is also available to plug into this connector and also make use of the security circuit via a passthrough connector.

16. Output to Transformer

High Voltage Transformer power connection.

17. Main Input

Main input power cable connects here.

18. Ground Terminal

19. **TX1**

Signal/ Metering cable between H.V. Unit and controls connects here.


20. Timer

Press START/RESET to start the timer after test voltage has been reached. Press START/RESET again to reset timer to the original setting. Press HV OFF BYPASS to allow high voltage to remain on after the timer has expired. Test time can be set using the buttons on the face of the timer.

CONTROLS AND INDICATORS

High Voltage Transformer

Figure 3-2

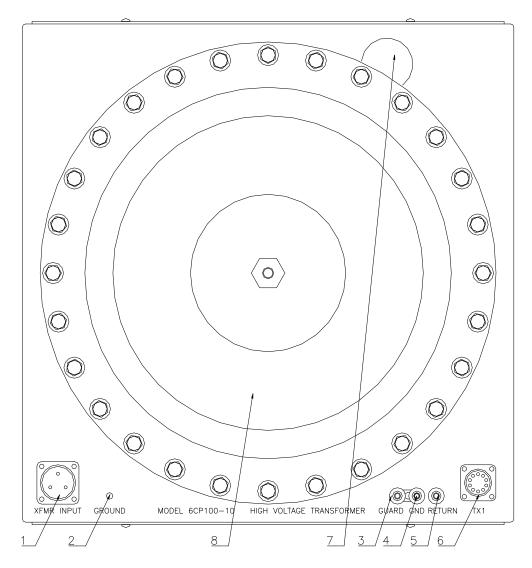

The following descriptions are keyed to Figure 3--2:

1. **Power Connector**

Connect the Power Cable from 'Output to Transformer' connector on control box at this point.

2. High Voltage Unit Ground Point

A Ground cable from facility ground or earth ground <u>must be connected here</u>.

3. Guard Binding Post (GRD)

Currents associated with this connection bypass the current meter (meter bypass connection). See Section 5 for more information on these connections.

4. **Ground Binding Post with Jumper Clip (GND) -** This binding post is connected to ground. See Section 5 for more information on these connections.

NOTE: The Jumper Clip **must always** be connected from Ground to either Return or Guard.

CONTROLS AND INDICATORS

High Voltage Transformer (cont'd)

5. Return Binding Post (RTN)

Low potential side of test specimen connects here. This connection routes current through the Current Meter circuit (metered connection point).

6. TX1 Connector

Signal / Metering cable connects from here to TX1 on control box.

7. 50 kV TAP

For 0 - 50 kV output at 0 - 200 mA – the Measurement Divider switch on the control panel must be set to 50 kV/200 mA position.


8. 100 kV Tap

For 0 - 100 kV output at 0 - 100 mA - the Measurement Divider switch on the control panel must be set to 100 kV / 10 mA.

- 1. Set up object under test.
- 2. The area to be used for the test must provide sufficient mechanical and electrical clearances. The approximate weight of each section is available from the nameplates or the Specification Page.
- 3. If the unit is to be operated indoors, be sure the floor will be strong enough to support the unit. If outdoor operation is to be used, the site for the base must be capable of supporting the unit without any settling that would tilt the assembly.
- 4. Position the High Voltage Transformer Tank and Control Unit as necessary for operation.
- 5. Clean entire High Voltage Unit using nothing stronger than ordinary household cleaner to remove all traces of any surface contamination. This cleaning should also include the High Voltage Electrodes.





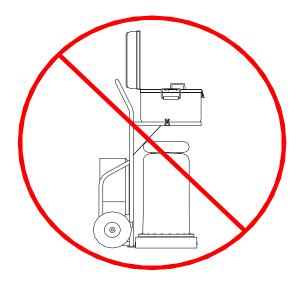

DO NOT OPERATE THE TEST SET WITHOUT REMOVING HIGH-VOLTAGE TRANSFORMER FROM THE CART.

THE HIGH-VOLTAGE TRANSFORMER MUST BE POSITIONED A SAFE DISTANCE FROM PERSONNEL AND OTHER OBJECTS.

WARNING:

Ground the output of the High Voltage Transformer until set-up is complete! Be sure the Main Power Circuit Breaker is in the OFF position before proceeding. This equipment should only be operated by personnel familiar with High Voltage testing and safety procedures.

- 1. Grounding Connections:
 - Tie ground post on control case to ground stud on high voltage cylinder base using copper braid or jacketed cable with current capacity equal to or greater than the input current.
 - Tie ground stud on the high voltage cylinder base to facility ground using copper braid or jacketed cable with current capacity equal to or greater than the input current.
- 2. Select the Standard or Guard current metering configuration (see following pages for explanation).

INITIAL SET-UP / ELECTRICAL

3. If the external interlock function is to be used, remove the jumper on the male cable end of the SX1/WX1 connector and connect the external security circuit at these points.

NOTE: The external interlock circuit must consist of a closed loop of dead contacts; an open circuit prevents the high voltage output from being energized. When the control power is on, the external circuit will be energized with 120 volts AC.

- 4. Connect signal / metering cable between High Voltage Transformer TX1 connector and TX1 connector on the controls.
- 5. Connect the power cable from the High Voltage Transformer to the 'Output to Transformer' connection on the control box.
- 6. Connect the test object to the output termination of the high voltage transformer using supplied output cable. Ensure that the ground connection is applicable for test level and type of test and that the connection has sufficient safety clearances for the voltage rating. Two high voltage output connections are possible:
 - 50kV, 200mA: The 50kV tap is located on the side of the high voltage cylinder. Set the Measurement Divider switch (See Section 4) to the 50 kV/200mA position when using this output. This sets the metering and overload properly for the output being used.
 - 100kV, 100mA: The 100kV tap is located on the top of the high voltage cylinder. Set the Measurement Divider switch (See Section 4) to the 100 kV/100mA position when using this output.

A wire can be used to make this connection; however, for best results (less corona leakage current), route a wire down the center of a one-inch diameter pipe (aluminum or copper) and solidly connect the ends of the wire to the output tap and the test specimen. The pipe should also be solidly connected at each end.

7. Connect the input main power cable to the Main Input connection at the control box and then to the facility power source.

INITIAL SET-UP / ELECTRICAL

CURRENT METER GUARD CIRCUIT

The base of the High Voltage transformer contains a currentmeter feature useful in measurement of different current sources. (Refer to Figure (3-1.)

1. Return Mode (Standard Mode)

The standard configuration is set up to measure the current from the high potential side of the unit under test to ground. This configuration **must** be used if it is not possible to isolate the low voltage side of the object under test from ground.

This measures the output current flowing from the high voltage output through the unit under test to ground **and** the current meter then senses the return current from ground to the "RTN" terminal of the high voltage transformer.

The low potential side of the unit under test is connected directly to ground. The binding post Jumper Clip is installed between the Ground ("GND") and the Return ("RTN") posts on the base of the H. V. Transformer.

2. Guard Mode

For test objects that can be fully isolated from ground it may be desirable to use the Guard Mode. In this mode **only current passing through the test object will be displayed on the current meter.** This will be especially important if very small currents are to be observed.

In this mode the current path does not flow directly to ground from the low potential side of the unit under test but flows through the currentmeter first and then to ground.

For Guard Mode operation, connect the low potential side of the unit under test directly to the Return post ("RTN") and **connect the jumper clip between the Guard ("GRD") and Ground** ("GND") posts that are located on the base of the HV Transformer.

(NOTE: Ensure the Ground ("GND") post is grounded.)

CAUTION


If the test specimen is not fully isolated from ground, the current meter will either not work, or will not display accurate current readings, and this mode should not be used.

INITIAL SET-UP / ELECTRICAL

CURRENTMETER GUARD CIRCUIT

Figure 4-1

RETURN / STANDARD MODE

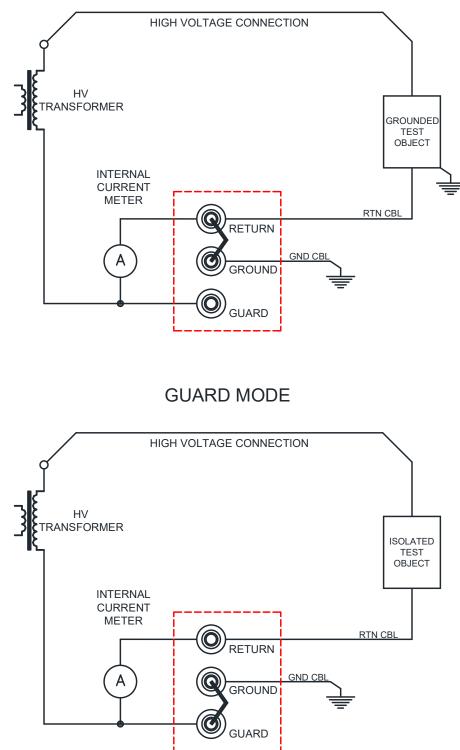



WARNING:

This equipment should be used only by personnel familiar with High Voltage testing and safety procedures.

- 1. Make sure that Main Power Circuit Breaker on the Control Panel is in OFF position.
- 2. Make sure that all electrical connections have been properly made between the Controls and High Voltage Unit, including grounds. Remove Ground from HV Transformer output if it is grounded. There is to be no connection to the high voltage outputs at this time. There must be adequate clearance from the High Voltage Unit to allow voltage to be raised safely.
- 3. Place currentmeter in RTN mode. (Connect jumper of RTN/GND/GRD binding posts between RTN and GND.)
- 4. Connect Main Input Power Cable to Controls and to Power Source. Switch the Main Power Circuit Breaker on the Control Panel to On position. Main Power indicator lamp should illuminate. Check that the Transformer Power Breaker is on, Emergency Off button is pulled up, Voltage Control is at Zero, Reset Lamp is Off, and EXT INTLK CKT is complete or has shorting jumper in place. HV Off lamp should be illuminated.
- 5. Press HV On switch. Indicator lamp should illuminate. Press the HV Off switch. HV On indicator lamp should extinguish and HV Off / Ready lamp should illuminate.

NOTE: The following conditions **must be** met before High Voltage will engage: External Interlock loop must be closed, Emergency Off switch must be closed (mushroom button up), Overload Reset Lamp must be off, Voltage Control at Zero Start, and Transformer Power Circuit Breaker on.

- 6. Set Measurement Divider Switch to 100 kV / 100 mA
- 7. Press the HV On switch.
- 8. Manually raise the Voltage Control dial on the Control Panel to approximately 50 (50%). Voltmeter should indicate voltage change and show approximately 45 to 55 kV.
- 9. Select 50 kV / 200 mA on Measurement Divider Selector Switch. At 50 on Voltage Control Dial, voltmeter should read approximately 22 to 28 kV.
- 10. Return Voltage Control to Zero. Press HV Off switch.
- 11. Turn Main Power Circuit Breaker off and connect a short between the 50kV High Voltage Output and Ground. Measurement Divider Switch is to be set at 50 kV / 200 mA.
- 12. Set Overcurrent Trip to low (1) setting.

OPERATIONAL VERIFICATION PROCEDURE

- 13. Turn Main Power Circuit Breaker on. Press HV On switch and slowly raise voltage with the dial on the Control Panel. Output Current Meter will indicate changed value, and at approximately 10% of output current rating, the High Voltage will trip off and the Overcurrent Indicator Lamp will illuminate. With the front panel Overload Selector Switch set at 50 kV/200 mA, the trip point should be at approximately 20 mA. Return Voltage Control to zero and turn off Main Power Circuit breaker.
- 14. Move short from 50 kV output to 100 kV output and ground. Repeat step 13. Unit should trip off at approximately 10 mA.

NOTE: Do not attempt to check 110% level of current trip under shorted output conditions. Rated output currents are only available through a capacitive load of sufficient value. Shorted current values should never exceed 50% of rated currents for the High Voltage Tap being used. If desired to test at 110% of current rating, the 50kV/200mA tap must be connected to a High Voltage Capacitor of approximately 6.5 nanofarads rated at 50 kVAC or higher (for 50 Hz).

15. Turn Off Main Power Circuit Breaker on Control Panel.

END OF OPERATIONAL VERIFICATION TEST!

- 1. Make sure that Main Power Circuit Breaker on the Control Panel is in the Off position.
- Make sure that all electrical connections have been properly and securely made, and that the test specimen is properly connected to the High Voltage Transformer (refer to Initial Set-up Procedures). Make sure the Guard / Ground / Return Jumper Clip is set properly for test being performed. Make sure all personnel are clear of danger and test area is clearly marked.
- 3. Connect Input Cable to Controls and to Power Source. Switch the Main Power Circuit Breaker on the Control Panel to the On position.
- 4. Set Measurement Divider switch to the position that matches the High Voltage output being used.
- 5. Set Overload Trip dial to desired trip-out level.

NOTE: In setting this device, it is important to consider the capacitive current that the sample under test will require. Set the dial to a high enough value to preclude false failure indications. If this value is not known, it is recommended that the dial be left in a higher setting.)

6. Press the HV On switch.

NOTE: The following conditions must be met before High Voltage will engage: Security Circuit Loop must be closed, Emergency Off Switch must be closed (mushroom button up), Overload Reset Lamp must be off, Voltage Control at Zero Start, Transformer Power Circuit Breaker on, and Ready lamp illuminated.)

- 7. Raise the manual Voltage Control knob on the Control Panel until desired test voltage level is reached. Keep voltage at desired level for required duration. Record data if desired.
- 8. After completion of the test, manually return the Output Voltage to zero or its lowest level via the Voltage Control knob.
- 9. Press HV Off momentary switch.
- 10. If during the test a failure should occur or if the Overcurrent Trip setting is exceeded, the High Voltage will automatically shut off. In order to regain High Voltage, the Reset pushbutton must be pressed, and Voltage Control knob returned to Zero.

SECTION 6: CALIBRATION



WARNING:


Calibration should only be done by persons familiar with High Voltage testing and safety procedures.

All calibrations have been done at the factory. Periodic calibration of the output voltmeter and output currentmeter should be done annually.

NOTE: Refer to Electrical Diagram Section for schematics pertaining to the model number of your test set.

Locating the Calibration Adjustments

The calibration points are shown in the following diagram.

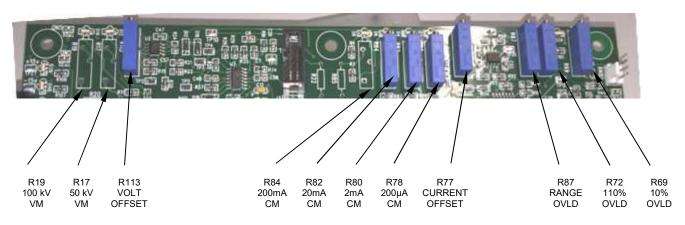

1. Output Voltmeter

Connect a precision high voltage voltmeter across the output to ground on 50 kV output, with Measurement Divider switch set to 50 kV. Raise the output to approximately 80% of the output rating. Adjust the reading on the panel meter (M2) by means of potentiometer R17 to a corresponding reading. Repeat procedure with precision high voltage voltmeter connected between the 100 kV output and ground with the Measurement Divider switch set to 100 kV. Adjust R19 to match precision voltmeter at 80% of output rating.

2. Output Currentmeter

It is necessary to connect adequately rated High Voltage loads (isolated from ground) to the high voltage unit that will allow each full range current to be drawn at approximately 15% or higher output voltage. This allows sufficient resolution to adjust current levels. All ranges can be calibrated from 50 kV output.

Place Binding Post Configuration in GUARD MODE. (Jumper clip is installed between "GRD" and "GND" posts.)

Connect a precision ammeter between the low potential side of the appropriate high voltage load and the "RTN" post. Select the 200 uA meter range. Raise the output to approximately 80% of the range rating. Adjust the reading on the panel meter (M1) by means of potentiometer R78 to a corresponding reading. Repeat for 2 mA, 20 mA and 200 mA ranges adjusting R80, R82 and R84, respectively. (High Voltage load will need to change when changing range).

NOTE: An optional method is to use current injection between RTN and GND (Guard Mode). **Do not turn High Voltage on for this method!**

3. Overcurrent

This calibration should not need adjustment (factory adjusted). If the Overcurrent Circuit is out of calibration, perform the following steps. To recalibrate the Overcurrent Circuit with the High Voltage Unit it will be necessary to connect an 8 nanofarad capacitor rated at 50 kVAC or higher to the 50 kV / 200 mA output of the High Voltage Unit. If the capacitor is isolated from ground at the low potential end, the low potential end can be connected to the RTN post. The Guard Post Jumper may be connected to GRD (Guard Mode). If the low potential end of the capacitor is grounded, the Ground Post Jumper must be connected to RTN post.

- a. Set front panel Measurement Divider switch to 50 kV/200mA. When current trip dial is set to minimum (1) current trip level should be approx. 20mA. When dial is set to maximum (11) trip level should be approx. 220mA.
- b. Set the Overload Trip potentiometer (R15) on the front panel to "1" and the Current Range switch to 200 mA.
- c. Turn on HV On and adjust the output current <u>slowly</u> until 10% of rated current is displayed on the current meter (20 mA).
- d. Adjust potentiometer R69 until the Reset lamp illuminates and high voltage is shut off.
- e. Set the Overcurrent Trip potentiometer (R15) on the front panel to "11."
- f. Turn on HV On and adjust the output current <u>slowly</u> until 110% of rated current is displayed on meter (220 mA).
- g. Adjust potentiometer R72 until the Reset Lamp illuminates and high voltage is shut off.
- h. Repeat steps "b" through "g" if necessary, until both settings are calibrated.

4. Range Overcurrent:

R87 sets an overcurrent for the ranges and should be set to trip at approximately 112% of full range current on medium range setting with current trip potentiometer set at "11."

5. Voltage offset adjustment (R113):

The voltage offset should be done with the voltage output lead connected to board ground. This typically can be done by connecting the output to the guard terminal. Once connected, the offset should be adjusted until the output meter reads nearest to zero. This offset adjustment should be done before adjustments to the voltage ranges are made. Test point T10 may also be used to make this adjustment.

6. Current offset adjustment (R77):

The current offset should be done with the current input connected to board ground. This typically can be done by placing a jumper from the guard to the return terminal. Once jumped, the offset should be adjusted until the output meter reads nearest to zero. This offset adjustment should be done before adjustments to the current ranges are made. Test point T37 may also be used to make this adjustment.

SECTION 7. TROUBLESHOOTING

General

If the controls do not operate properly after having been used according to the instructions, the following process may help.

- Check main facility input power to the test set.
- Check all control and switch settings.
- Check indicating lamps. (Spare lamps are available through Phenix Technologies.)
- Check Fuse F1 and F2
- Check operation of main power circuit breaker (CB1). Main Power lamp should be on.
- Check Transformer Power circuit breaker.
- Check all plug connections, internal and external, on the test set.

Specific Problems

- 1. High voltage cannot be turned on?
 - Emergency OFF has been pressed pull switch button up.
 - External interlock is open (SX1/WX1).
 - Voltage Control dial is not in zero start position.
 - Protection circuit (Overload Trip) is not Reset.
 - Transformer Power circuit breaker is off or faulty.
 - Faulty HV On or Off switch.
 - Faulty relay contacts.

2. Voltage control inoperable?

- Transformer Power circuit breaker faulty.
- Problem with power cable between Controls and High Voltage Unit.
- High voltage is not on (K8 or K3 not energized or see number 1 above).
- Faulty regulator T1.
- Faulty step-up transformer in high voltage unit. (T301).

3. Overload Trip inoperable?

- Improper sensitivity (adjust Current Trip (R15) on front panel).
- Defective U13.
- Check the +15 volts DC and -15 volts DC regulator (U16, U17).
- Check LP4 (RESET) and relay K7 on PCB 1387.

TROUBLESHOOTING

Specific Problems (cont'd)

4. Currentmeter inoperable?

- Binding post jumper clip installed between ground and guard with a grounded test object.
- Connection between currentmeter and high voltage test specimen return connected improperly.
- Meter damaged
- Faulty TX1 interconnect cable.
- Damaged or inoperative range switch or wiring.
- Faulty Circuit on PCB1387.

5. Voltmeter inoperable?

- Faulty TX1 interconnect cable.
- Meter damaged.
- No high voltage present at transformer output.
- Damaged or inoperative Measurement Divider Switch.
- Faulty circuit on PCB1387.

6. No output voltage from high voltage section?

- No input to voltage regulator section, possible problems with K8 or K3, regulator (T1), or with Transformer Power circuit breaker.
- Internal connection broken.
- High voltage winding of T2 short circuited.
- Refer also to 1 and 2 above.

SECTION 8: MECHANICAL MAINTENANCE

General

CAUTION: When cleaning, always have unit disconnected from power source.

No solution or chemical stronger than an ordinary household cleaner should be applied to the cabinet area of this unit. Care must be used when cleaning the meter faces and console panel. Abrasives may remove printing and descriptive titles and scratch meter faces. When cleaning, always have unit disconnected from power source. Never attempt to clean inside the unit as the cleaning solution may cause damage to the electronic components.

High Voltage Transformer

Surface

All surfaces are finished with heavy duty paints and will provide adequate protection against the elements in normal use. It is recommended that the finish be wiped down for longer life and also for proper electrical operation of the unit. Also inspect all fabrication joints for oil leakage. If a leak is found, consult factory.

Control Box / Regulator Section

At least once every year, the control assembly should be removed for inspection of the regulator assembly and other parts. If dust and dirt are present, cleaning with a dry brush and air hose should be sufficient. Inspect the voltage regulator contact surfaces for any signs of burning or wear. The brushes are the carbon type and are constructed to provide a 1/8" wide contact point. If they are worn down to be nearing (approximately) 1/32" at the wider part of the brush, they should be replaced.

The only other mechanical maintenance needed on the control box is that it be kept clean.

Transformer Oil Maintenance

At time intervals ranging from six months to one year, the oil purity (see next page) should be checked in the high voltage transformer to verify its reliability. If the transformer is subject to adverse weather conditions or an oil leak develops, the oil purity should be checked regularly.

NOTE: Typical test data for the oil used by Phenix Technologies are provided at the end of this section.

1. The most reliable means of determining the purity of the oil in the field is to test the dielectric strength. Test sets for this purpose available on the market differ in design, particularly in the shape of the electrodes and the test container. Tests on samples from the same oil carried out with electrodes of different types give different breakdown values for the same distance between the electrodes. Oil test values should therefore always be accompanied by information about the type of test gap used. The most common types of test gaps are:

- a. Cylinder gap.
- b. Spheres, 12.5 m in diameter.
- c. Flat discs, 25 mm in diameter.
- d. Segments of spheres, 35 mm in diameter, radius of sphere 25 mm.

Phenix employs for field testing Gap C, flat discs, which is per ASTM specification D-877.

2. Regardless of which type of test gap is used, it is important that container and electrodes be well cleaned and dried before oil filling. Cleaning should be done per the instructions with the oil testing equipment.

3. Sample the oil both at the top and the bottom of the transformer, if possible. In general, with small (portable) transformers, it may not be practical to sample the bottom oil. Phenix recommends a minimum test level of 30 kV when using the ASTM D-877 test procedure. If the oil tests lower than this, consult Phenix Technologies' Service Department for recommendations. Generally, for small (portable) transformers with small oil volumes, draining and refilling with new or repurified oil will be recommended. If filtering is recommended, proceed as follows:

a. Perform the purification of contaminated oil in a transformer by circulating the oil between the transformer and the purification plant, drawing off the oil at the base and returning it at the top of the transformer. If the oil is heated in the purification plant, a stratification of heated and unheated oil will take place in the transformer. As the different oil layers mix very little, the circulation of the oil quantity will be more effective, thus reducing the time needed for treatment of the oil. Circulation of the oil is carried on until oil tests indicate that the desired oil quality is obtained. After circulation, the oil level is adjusted in accordance with the instruction plate on the transformer to the correct level at the prevailing oil temperature.

b. When making or changing connections, always fill the feed hose completely with oil before opening the bottom valve on the transformer. If this precaution is not taken, the air in the hose, which may have considerable volume, will be forced into the transformer with the oil stream.

NOTE: If air has been injected into the oil, it is recommended that a period of two days be allowed after completion of oil filling until energizing to allow the oil to absorb any occluded air or gas in the insulation.

4. Oil Specifications

Transformer oil is a high-quality insulating oil specially refined and formulated to meet the exacting requirements of major electrical equipment manufacturers and users. It also meets Federal Specification VV-I-530a.

High quality mineral-based transformer oil is recommended as the insulating and cooling medium for oilimmersed transformers. It is also recommended for arc-forming apparatus such as switches, circuit breakers, tap changers, reclosers, and fuses. General Characteristics of transformer oil include:

CHECKING OIL PURITY

a. High Dielectric Strength:

Transformer Oil has high electrical insulating values as shown by their dielectric strengths of over 30,000 volts.

b. Excellent Oxidation Stability:

Excellent oxidation stability and high resistance to sludging provide protection, particularly where high temperatures are likely to be encountered. These products are specially refined to ensure long time service with a minimum of maintenance.

c. Freedom From Contaminants:

Absence of organic acids, corrosive sulfur, and other foreign materials, which might affect metals or insulation, ensures long life for the oil as well as the electrical units.

d. High Interfacial Tension:

High interfacial tension shows the absence of soluble polar contaminants. Refinery sealed containers assure maintenance of purity in transit.

e. Good Heat Transfer Properties:

Good circulation and rapid transfer of heat from the coils to the cooling fins are assured by low viscosities at all operating temperatures.

TEST	METHOD	UNITS	SPECIFICATION
Moisture	ASTM D1533	Mg/kg	35 max
Color	ASTM D1500	ASTM	0.5 max
DDF (Power Factor) @100°C	ASTM D924	0.3 max	0.3 max
Breakdown voltage (2mm gap)	ASTM D1816	kV	35 min
Inhibitor Content	ASTM D2668	%w/w	0.30 max
Interfacial tension	ASTM D971	dynes/cm	40 min
Density @15℃	ASTM D1298	g/ml	0.91 max
Viscosity @ 100°C	ASTM D445	cSt	3.0 max
Viscosity @ 40°C	ASTM D445	cSt	12.0 max
Viscosity @ 0°C	ASTM D445	cSt	76.0 max
Refractive Index	ASTM 1218	Units	
Carbon N%	ASTM D2140	%	
Carbon A%	ASTM D2140	%	
Carbon P%	ASTM D2140	%	
Corrosive Sulfur	ASTM D1275B		Noncorrosive
PCBs – Detection Unit 1 mg/kg	ASTM D4059	mg/kg	Not Detected
Flash Point	ASTM D92	0°C	145 min

Typical Test Data for Transformer Oil

SECTION 10: TRANSPORTING / STORAGE OF EQUIPMENT

In some instances, there is a requirement for transporting the equipment from one location to another for onsite field testing. If such conditions prevail, the following precautions should be adhered to.

1. Control Box / Regulator Section

Anchor sufficiently to prevent movement during shipment and cover with a canvas or other protective covering to prevent damage during transport.

2. Interconnect Cables

The connectors, both male and female ends, should be covered to prevent foreign matter from entering.

3. High Voltage Transformer

Anchor sufficiently to prevent movement during transport and cover with a canvas or other protective covering to prevent damages during transport. Prior to operation, all insulating materials and bushings should be cleaned. Protective caps should be in place on connectors.

STORAGE OF EQUIPMENT

If the equipment will be stored for a prolonged period, the following precautions are recommended.

- 1. The equipment should be covered and kept in a warm, dry environment (95% maximum humidity, 5 to 50 degrees C).
- 2. If the high voltage transformer is to be stored outdoors, it should be completely covered to prevent damage from environmental conditions.
- 3. In no case should the control box be stored outdoors, unless previously specified in the original purchase agreement.
- 4. Prior to placing the equipment back into operation, all aspects of the maintenance schedule should be strictly adhered to.

SECTION 11: CIRCUIT DIAGRAM SYMBOLS

CIRCUIT DIAGRAM SYMBOLS SYMBOLES POUR SCHEMA DE CIRCUIT SYMBOLE ZU SCHEMA

REF	SYMBOL	DESCRIPTION	DESCRIPTION	BEMENKUNG
A	-1>	Amplifier	Unite d'amplificateur	Verstárker
ARSR	- v	Surge Arrestor	Parafoudre	Ueberspannungsableiter
с	Ļ	Capacitor	Condensateur	Kondensator
BSHG	\searrow	Bushing	Tranversée	Durchfuehoung
с	Ť	Electrolytic Capacitor	Condensateur électrol	Eleckrolytik kondensator
F	ŝ	Fuse	Fusible	Sicherung
СТ	\overline{m}	Current Transfomer	Transformateur de Courant	Stromtransformer
СВ	$\tilde{~}$	Circuit Breaker	Intérupteur	Unterbrecher
к	\sim	Relay, Contactor	Relais, Contacteur	Relais, Schutz
L		Inductor	Self	Drossel, Spule
мот	-DC-	Motor	Moteur	Motor
MOV		Movistor	Parafoudre	Movistor
NE	Ð	Neon	Parafoudre	Ueberspannungsableiter
LP	X	Lamp, Indicator	Lampe	Meldeleuchte
R		Resistor	Resistance	Widerstand
R	-~~~-	Variable Resisitor	Resistance Variable	Widerstand
Т	₩	Transformer	Transformateur	Transformer
тв	00	Terminal Block	Borne	Løsbare Klemme
x		Connector	Prise de Courant	Steckverbindung
к	÷	Relay Contact Normally Open	Contact Normalement Ouvert	Schlierskontakt
к	¥	Relay Contact Normally Closed	Contact Normalement Fermé	Oeffnungskontakt
к	÷_*	Changeover Contact	Contact de Changement	Umschaltkontakt
	() 7	Shielded Wire	Cable blindé	Abgeschirmetes Kabel
TR	ĸ	Transistor	Transisteur	Transistor
М	<u>-</u>	Analog Meter	Insrument Analogue	Analog Meter
D	-₩-	Diode	Diode	Diode
z	→	Zener	Diode Zener	Zener
SCR	\rightarrow	Thyristor	Thyristor	Thyristor
SW	Ł	Normally Open Maintained Switch	Interrupteur Normalement Maintenu Ouvert	Schrittschalter (Schliesser)
SW	_	Normally Closed Maintained Switch	Interrupteur Normalement Maintenu Fermé	Schrittshalter (Oeffner)
sw	ملہ	Normally Closed Momentary Switch	Interrupteur Normalement Fermé Momentanement	Druckschalter (Oeffner)
sw	<u>↓</u>	Normally Open Momentary Switch	Interrupteur Normalement Ouvert Momentanement	Druckschalter (Schliesser)
DP	- x -	Current Overload Device	Dispositif De Sûr Intensité	UeberstromschutzEinheit

SECTION 12: ELECTRICAL DIAGRAMS

Drawing Number

Description

9602020

6CP100/50-10 (220V, 50/60 Hz) System Diagram

SECTION 13: PARTS ORDERING INFORMATION

Replacement parts are available from Phenix Technologies, Inc.

Changes to Phenix Technologies' products are sometimes made to accommodate improved components as they become available, and to give you the benefit of the latest technical improvements developed in our Engineering Department. It is, therefore, important when ordering parts to include the serial number of the unit as well as the part number of the replacement part.

When your purchase order is received at our office, a representative of Phenix Technologies will contact you to confirm the current price of the part being ordered. If a part you order has been replaced with a new or improved part, an Applications Engineer will contact you concerning any change in part number.

Your order for replacement parts should be sent to:

Service Department Phenix Technologies, Inc. 75 Speicher Drive Accident, Maryland 21520

PH: 1 (301) 746-8118 Fax: 1 (301) 895-5570 E-mail: info@phenixtech.com

SECTION 14: RECOMMENDED SPARE PARTS

Phenix Technologies recommends that the customer purchase and stock the following parts for normal maintenance of the unit. The recommended quantity should be sufficient to support the unit during normal operation.

If the unit will be operated at an isolated site for an extended period or will be subjected to unusual stresses, a larger quantity of parts should be stocked as spares. In such a case, contact your Phenix Technologies' sales representative for a recommendation.

Current prices may be obtained by contacting the Service Department at Phenix Technologies.

Part Name	Computer <u>Number</u>	Recommended <u>Quantity</u>
LCD Meter, KNS 3 ½ Digit DMO-66T	1506400	1
Limit Switch, 2HBA190-1 (SW7)	1866005	1
Switch, Mom., 1 Pole, 31-121.025 EAO (HV on, HV off, Reset)	1860120	1
Fuse, 0.5 A, 3AG (F1-2)	1603599	2
Rotary Switch –4P, 2-6 Pos.	1863042	1
Relay (K3)	1705460	1
Input Power Cable (220V)	30110028	1
Interconnect Power Cable (220V)	30110007	1
Interconnect Signal / Metering cable	30160001	1
Led 24V White	1420163	3
Led 24V Red	1420162	1
Led 24V Green	1420161	1

SECTION 15: 6CP100/50-10 PARTS LIST

Item	Part Number	Description	Quantity
		CONTROL SECTION	
			1
CB1,2	1601332	30A, 2P CIRCUIT BREAKER	2
CON1	1151183	MALE CONTACT PINS, GOLD 10-8 AWG	3
CON1	1151178	HIGH CURRENT 3 PIN RECPT.	1
CON2	3150167	MS 22-2 F CONNECTOR ASSEMBLY	1
CON2	1151185	FEMALE CONTACT PINS, GOLD, 10-8 AWG	2
D1-D5	1780025	DIODE 1N4007	5
F1-2	1603599	FUSE, AGC-0.5	2
F1-2	1603920	FUSEHOLDER 3AG	2
GND CBL	30080018	20' GROUND CABLE	1
K3	1705465	FUR.#42BF35AF 30A/3P	1
LP1	1423300	LAMP SOCKET	1
LP1,4,SW10	1420163	LED 24VDC WHITE	3
LP1,SW10,SW11	1422153	LENS, CLEAR	3
LP2	1420162	LED 24VDC RED	1
LP2	1422150	LENS, RED	1
LP3	1420161	LED 24VDC GREEN	1
LP3	1422151	LENS, GREEN	1
LP4	1422148	LENS, BLUE	1
M1,M2	31138800	PCB1388 METER PROTECTION BD	2
M1,M2	1506400	DIGITAL METER, ½ DIGIT LCD	2
M1,M2	1152152	RIBBON CONNECTOR	2
M1,M2	1079909	RIBBON CABLE	6FT
MOV1	1606110	MOVISTOR, V275LA40A	1
PCB1387	31138714	CONTROL/METERING BD	1
R15	1761098	RESISTOR, 10kΩ,2W LINEAR	1
R15 -CAP	1355102	PEAKED CAP	1
R15 KNOB	1355102	POTENTIOMETER KNOB	1
	1355910		1
R15-DIAL		POTENTIOMETER DIAL	1
R15-KNOB	1355905	STATOR BLACK	1
R16A-C	1720201	RESISTOR, 180 Ω, ½ W	3
RTN CBL	30080010		1
SW10	1860265	SWITCH, LATCH 2 POLE	1
SW11	1860260	SWITCH, LATCH 1 POLE	1
SW2-4	1860120	SWITCH, MOM 1 POLE	3
SW5	1863042	ROTARY SWITCH, 4P 2-6POS-S.	1
SW5, SW9	1355310	PEAKED CAP	2
SW7	1866005	ROLLER LIMIT SWITCH	1
SW8	1860900	LATCHING MUSHROOM PB W / KEY	1
SW8	1422325	BUTTON HOLDER	1
SW8	1862905	SIEMENS#3SB3400-OC,NC	1
SW9	1863048	ROTARY SW, 4P, 2-3 POS, SHORTING	1
SX1/WX1	1151147	AMP RECPT. 7 FEMALE PIN, SIZE 13	1
SX1/WX1	1151174	CONTACT PINS, 24-20 AWG FEMALE	6
SX1/WX1	50100018	SX1/WX1 7 PIN PLUG	1
T1	1890239	VARIABLE TRANSFORMER, GE #9T92A40	1
T2	1896017	CONTROL POWER TRANSFORMER, 50VA	1
TMR1	9602133	PANEL MOUNT PROGRAMMABLE TIMER	1
TX1	1151158	MS 18-01S F CHASSIS CONNECTOR	1
TX1 CBL	30160001	METERING INTERCONNECT CABLE	1

ltem	Part Number	Description	Quantity
	HIGH VC	DLTAGE CYLINDER AND BASE	
MOV301-303	31107001	PCB1070: MOVISTOR BRD 275V	1
T301	38342713	HIGH VOLTAGE TRANSFORMER, GO1-2713	1
R301A-C	1748351	RESISTOR, 150MΩ,1%,12W, SSX103	3
R302A-B	1748310	RESISTOR, 100MΩ,1%,12W, SSX103	2
SPG303-304	1605110	CG90L SPARKGAP	2
BP-GROUND	1351103	BINDING POST 459 GREEN	1
BP-GUARD	1351104	BINDING POST 459 WHITE	1
BP-RETURN	1351102	BINDING POST 459 RED	1
BP-SHORT BAR	1351110	SHORTING BAR	1
CON3	1151178	HIGH CURRENT RECPT. 3M PIN	1
CON3	1151183	MALE CONTACT PINS, GOLD 10-8AWG	2
R302A,B	1748310	12W, 100MΩ, 1%	2
SPG303-304	1605110	90V SPARKGAP	2
PCB1458	31145814	PCB1458: 6CP100/50-10 CM/VM RES BRD	1
TX1	1151158	AMP RECPT. 16M PIN SIZE 17	1
TX1	1151170	CONTACT PINS, 24-20 AWG, MALE	10
GNDCBL	30080018	20' GROUND CABLE	1
RTNCBL	30080010	20' RETURN CABLE	1

SECTION 16: RETURNED MATERIAL

If for any reason it should become necessary to return this equipment to the factory, the Service Department of Phenix Technologies, Inc. must be given the following information:

Name Plate Information Model Number Serial Number Reason for Return Cause of Defect

If Phenix Technologies, Inc. deems return of the part appropriate; it will then issue an "Authorization for Return."

If return is not deemed advisable, other inspection arrangements will be made.

NOTE: Material received at this plant without the proper authorization shall be held as "Customer's Property" with no service until such time as the proper steps have been taken.

Your cooperation is requested in order to ensure prompt service.

SECTION 17: CUSTOMER COMMENTS/SUGGESTIONS

Phenix Technologies made significant efforts to ensure that the materials in this Operator's Manual are correct. If there are concerns or comments as you have used this information, Phenix Technologies appreciates any feedback.

Unit Serial Number:

Sect	Page(s)	Comment

Please return to Phenix Technologies, Engineering Department, 75 Speicher Drive, Accident, MD 21520 USA.

Phone: 1 (301) 746-8118, Fax: 1 (301) 895-5570 or Email: info@phenixtech.com